

8. Tighten each nut by hand until the wheel is against the hub. Tighten wheel lug nuts firmly in a crisscross sequence. Be sure to tighten nuts evenly and to proper torque specifications (90 to 95 foot pounds).